


Projecting 3D Images



- 1

Press the  power button on the remote control or the projection system's control panel.
- 2

Turn on your 3D-compatible video device (Blu-ray™ disc player, video game console, etc.) and make sure it is set to play in 3D mode.
- 3

Put on your 3D glasses.
- 4

Press the **2D/3D** button on the remote control to activate the 3D display feature.

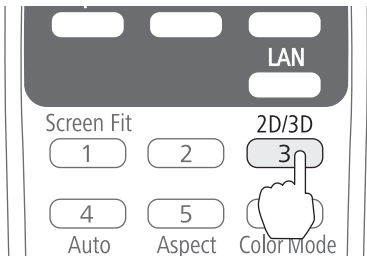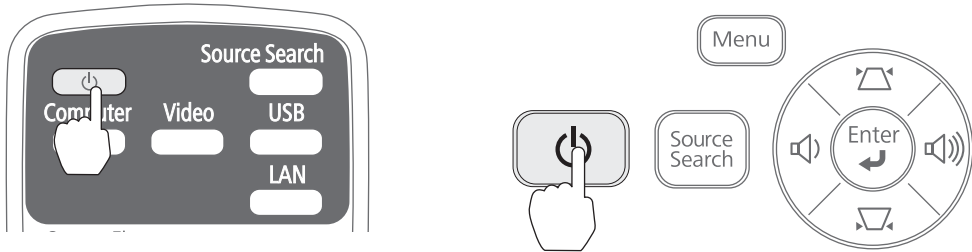

Setting up the projection system for 3D

In order to set up the projection system to display 3D images, you must first position the projectors in a stacked configuration and use the system's Screen Fit process to superimpose their images. If this hasn't already been done, see your *Setup Guide* for instructions.

Replacement parts/accessories


Product	Part number
Lamp (ELPLP67)	V13H010L67
Air filter (ELPAF42)	V13H134A42
Passive 3D glasses for children (ELPGS02B)	V12H541B20
Passive 3D glasses for adults (ELPGS02A)	V12H541A20

Note: There are 5 pairs of glasses in each accessory box. The supplied glasses and the additional glasses sold by Epson are specifically designed for use with this projection system. Other passive glasses may not work with the system.

Astuces pour le projecteur PowerLite® W16SK

Projection d'images 3D


- 1 Appuyez sur le bouton  d'alimentation de la télécommande ou du panneau de commande du système de projection.

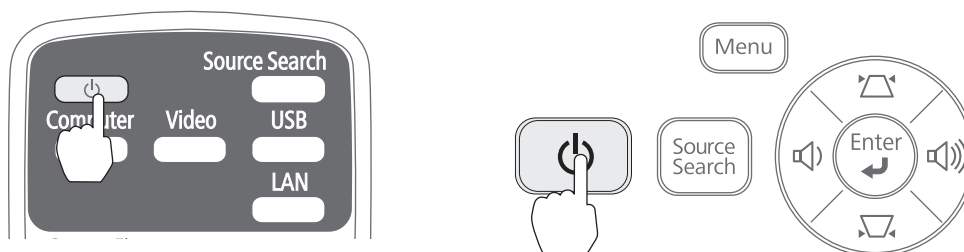

- 2 Mettez l'appareil vidéo compatible 3D sous tension (lecteur de disques Blu-ray^{MC}, console de jeux vidéo, etc.) et assurez-vous qu'il est réglé pour lire en mode 3D.

- 3 Mettez les lunettes 3D.

- 4 Appuyez sur le bouton **2D/3D** de la télécommande pour activer la fonction d'affichage en 3D.

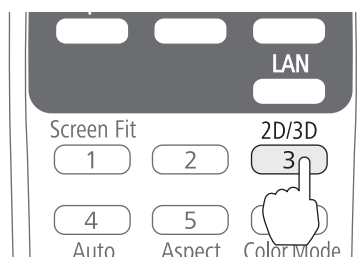

Configuration du système de projection pour l'affichage d'images en 3D

Afin de configurer le système de projection pour l'affichage d'images 3D, vous devez d'abord empiler les projecteurs et utiliser la procédure Screen Fit du système pour superposer leurs images. Si ce n'est déjà fait, consultez le *Guide d'installation* pour les instructions.

Pièces de rechange/accessoires

Produit	Numéro de pièce
Lampe (ELPLP67)	V13H010L67
Filtre à air (ELPAF42)	V13H134A42
Lunettes 3D passives pour les enfants (ELPGS02B)	V12H541B20
Lunettes 3D passives pour les adultes (ELPGS02A)	V12H541A20

Remarque : Il y a 5 paires de lunettes dans chaque boîte d'accessoires. Les lunettes fournies et les lunettes additionnelles vendues par Epson ont été créées spécifiquement pour l'utilisation avec ce système de projection. Les autres lunettes passives pourraient ne pas fonctionner avec ce système.